 
 
 
 
 

 
 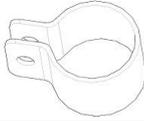





3x 3 PARTY TENT



1.	Frame Pole		6
2.	Frame Pole		10
3.	Frame Pole		4
5.	Connection		3
4.	Support Pole		6
6.	3 way Connector		6
7.	4 way Connector		3
8.	Ground corner connector		4
9.	Ground middle connector		2
10.	Ground door connector		2
11.	Pipe holder of connection No.5		6
12.	Guy line		4
13.	8x300mm peg		4
14.	6x180mm Peg		6
15.	4x180mm Peg		26
16.	Long bungee ball		87
17.	Short Bungee Ball		14
18.	Screw M6X30MM with wing nut		6
19.	Finger screw		52
20.	Hook		6
21.	Turn buckle		4
22.	Steel wire(use together with turn buckle)		8
23.	roof		1



 
3x 3 PARTY TENT

24.	Sidewalls		4
25.	End walls		2


I
 Select an area of flat ground for the tent. Unpack the carton and check all parts including tubes, tent and accessories... etc. are present. Assemble the roof top framework by joining the (6,7,8,9,10) Connectors together with poles (1,2,3,4,5). Ensure the tension screw is fixed to every pole tightly. Use the turn buckle and steel wire to tighten the frame. Before you put all on, do not tighten them.

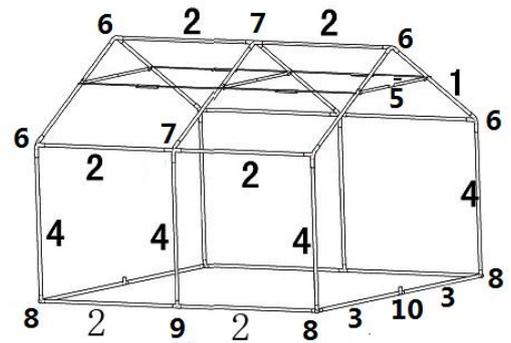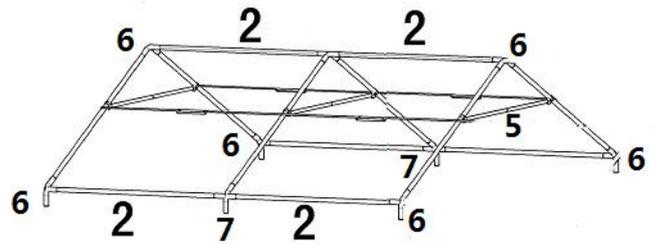

II Attach one end of the support poles (4) to the roof joints (6,7).

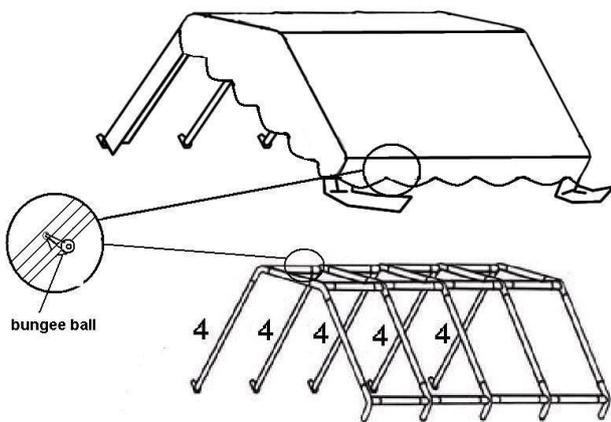

III
 Place roof on frame, and attach with bungee fixings, take care not to over tension bungee, as this may cause difficulty correctly fitting roof.

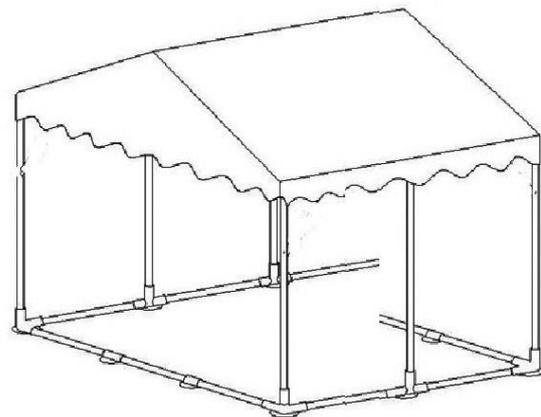



IV
 Attach the other 4 supporting poles (4) to the joints (5,6), build-up the framework. Use the 6x180mm peg to fix each pole into the ground and use the hook to fix the leg cover to the leg.



3x 3 PARTY TENT

V

Spread the wall and door panels, and attach to framework using the bungee cords. Clasp the frame to the metal eyelets (located over the wall and door panels) to ensure stability. Also use the 4x180mm pegs to fix the doors and walls to the ground.

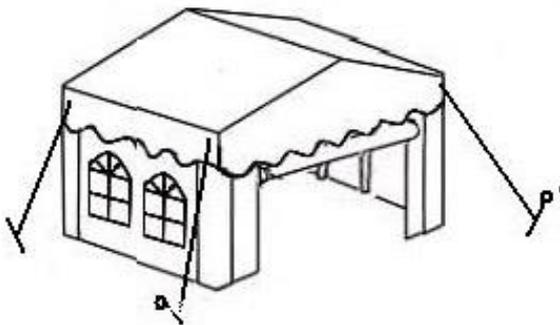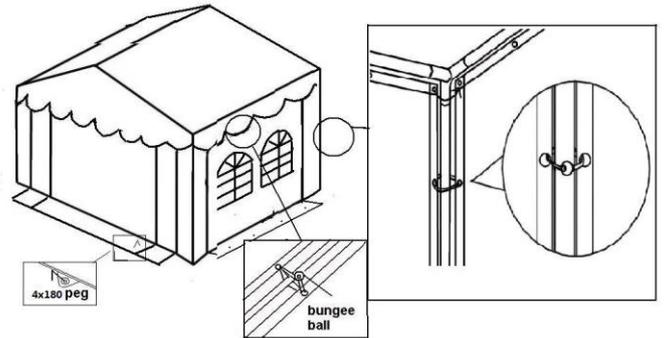

VI

Attach Guy line to all corners of tent and fix to ground using ground pegs 8X300MM.

Warning

1. Take note that the tent needs to be handled carefully to avoid damage.
2. Do not force the frame, as there may be damage in the process.
3. Tents are meant as temporary shelter and must be evacuated under extreme weather conditions.
4. Please select a suitable site for the tent to avoid damage to underground sprinkler systems, water, gas or electrical lines.
5. Whilst this product is Fire retardant care should be taken. Keep away from naked flame and other heat sources.

All images used are for illustration purposes only and may not represent an individual product.